


Squirter DTI[®] Tightening Method




Step 1

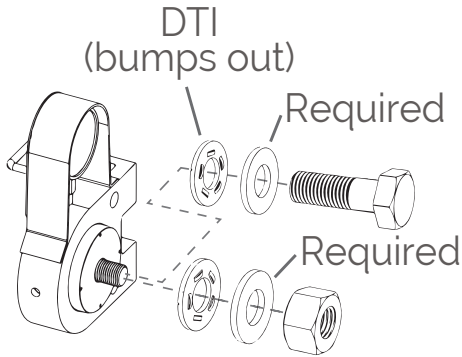


Assemble hardware in a tension calibrator.

Step 2

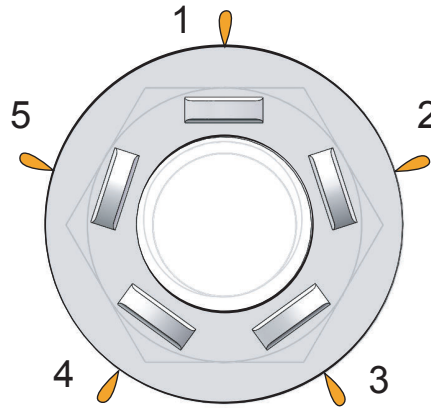

Tighten until the Squirter DTI[®] has orange visible at all bump locations.

Step 3

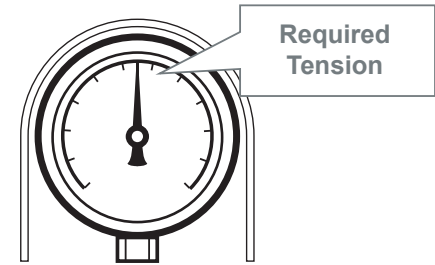


Confirm the tension is at or above the requirement.

Completely flat is acceptable after full squirt.


The visual inspection method is now confirmed for use in the steelwork.

Squirter DTI® Installation and Inspection

Assemble

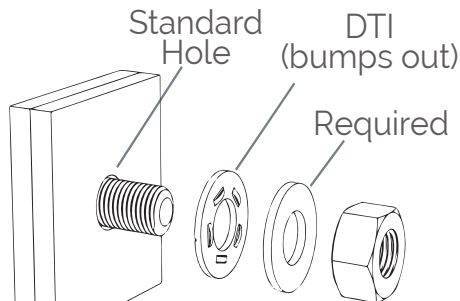

Recommended

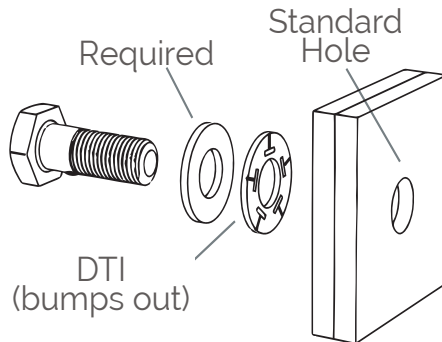

Alternative

Snug


Verify DuraSquirt® DTI has orange visible at all bump locations.

If it's not easy call us! We want you hanging iron.

(802) 460-3100 or appliedbolting.com

Check the website for bolting resources; Including test forms.

Tighten Squirter® DTI

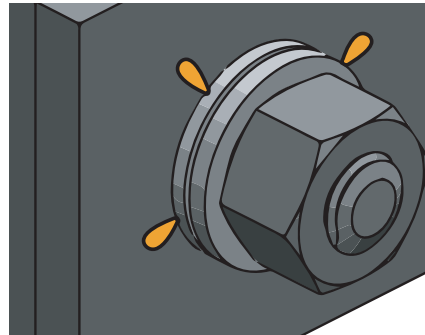

Tighten until the DuraSquirt® DTI has orange visible at all bump locations.

Scan the QR
code for Videos,
Tips & Support

